

DC Install Kits


- For RV's, boats, and trucks
- Innovative, compact designs
- Use with GP Solar Kits

Installation Instructions

1. The inverter fuse is to be mounted on the positive cable near the battery.
2. Cut the positive (red) cable according to desired location. Strip $\frac{1}{2}$ " to $\frac{3}{4}$ " of insulation from the cables, and connect the fuse block as shown.
3. Tighten the lugs to 10 ft.lbs.
4. Observe the polarity of the cables (red = positive) (black = negative) and connect accordingly to the inverter.
5. Observe the polarity of the cables and connect them accordingly to the battery.



The Go Power! DC Install Kit

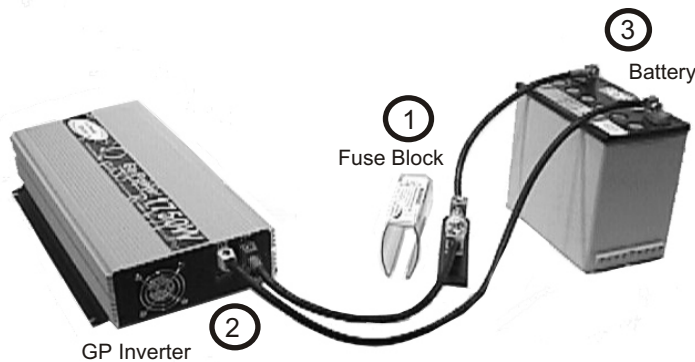

Call Toll Free:
1-866-247-6527
Fax: 1-866-607-6527
www.gpelectric.com

Specifications

Kit	Kit 2	Kit 3	Kit 4
Fuse Size:	110 Amp Fuse	200 Amp Fuse	300 Amp Fuse
Cable Gauge	IC #4 - 10 ft.	IC #2 - 10 ft.	IC 2/0 - 10 ft.
Inverter	12 Volt 800-1000 Watt	12 Volt 1500-2000 Watt	12 Volt 2500-3000 Watt
	24 Volt 1800 Watt	24 Volt 2000-2400 Watt	24 Volt 2500 Watt
Go Power! Quick Check:	GP-1000, GP- SW300 GP-SW600, GP-SW1500-24	GP-1750, GP- SWSW1500-12	GP-2500
Kit contained in this package:	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
UPC:	8-39085-00040-3	8-39085-00003-8	8-39085-00041-0