



WHITE STAR PRODUCTS *LP*

18B Copsey Place, Avondale. PO Box 27-202, Mt Roskill
Auckland, New Zealand

 09-620-7109

 09-620-7086

 sales@whitestarproducts.co.nz

Fynspray WS 67 ULTRA GALLEY PUMP

REPAIR INSTRUCTIONS

To replace the plunger washer (#11) – Loss of suction

Unscrew the gland nut (#7) which enables the complete plunger assembly to be removed. Check that the plunger washer (#11) is soft & pliable and that it is a push fit inside the pump barrel. If it is not a push fit and/or is cracked it must be replaced.

To replace, immerse plunger washer in hot water, when warm slide over the bottom of plunger valve. Ensure the cup is up, as per diagram. Apply a little food oil to assist assembly. The plunger washer should slide freely in the barrel.

To replace the gland seal (#5) – Leaking of the gland

Having removed the complete pump assembly (as above) unscrew the plunger valve body (#12) [earlier models unscrew the plunger knob (#8)]. DO NOT HOLD THE PLUNGER TUBE IN ANY TOOLS AS THEY MAY CAUSE DAMAGE. When replacing or removing the gland seal onto the plunger wind it in the direction of the plunger thread so as not to damage the lip edge.

The gland nut 'o' ring (#6) is also included in the Service Kitset and whether replaced or not should be lubricated with a little Vaseline.


Note that both the gland nut (#7) and the spout gland nut (#14) should not be over-tightened.

Parts #5, 6, & 11 are contained in the service kitset.

White Star Products *LP*
18B Copsey Place
Avondale
Auckland

WS 67

W.S. 67 *Fynspray* ULTRA GALLEY PUMP

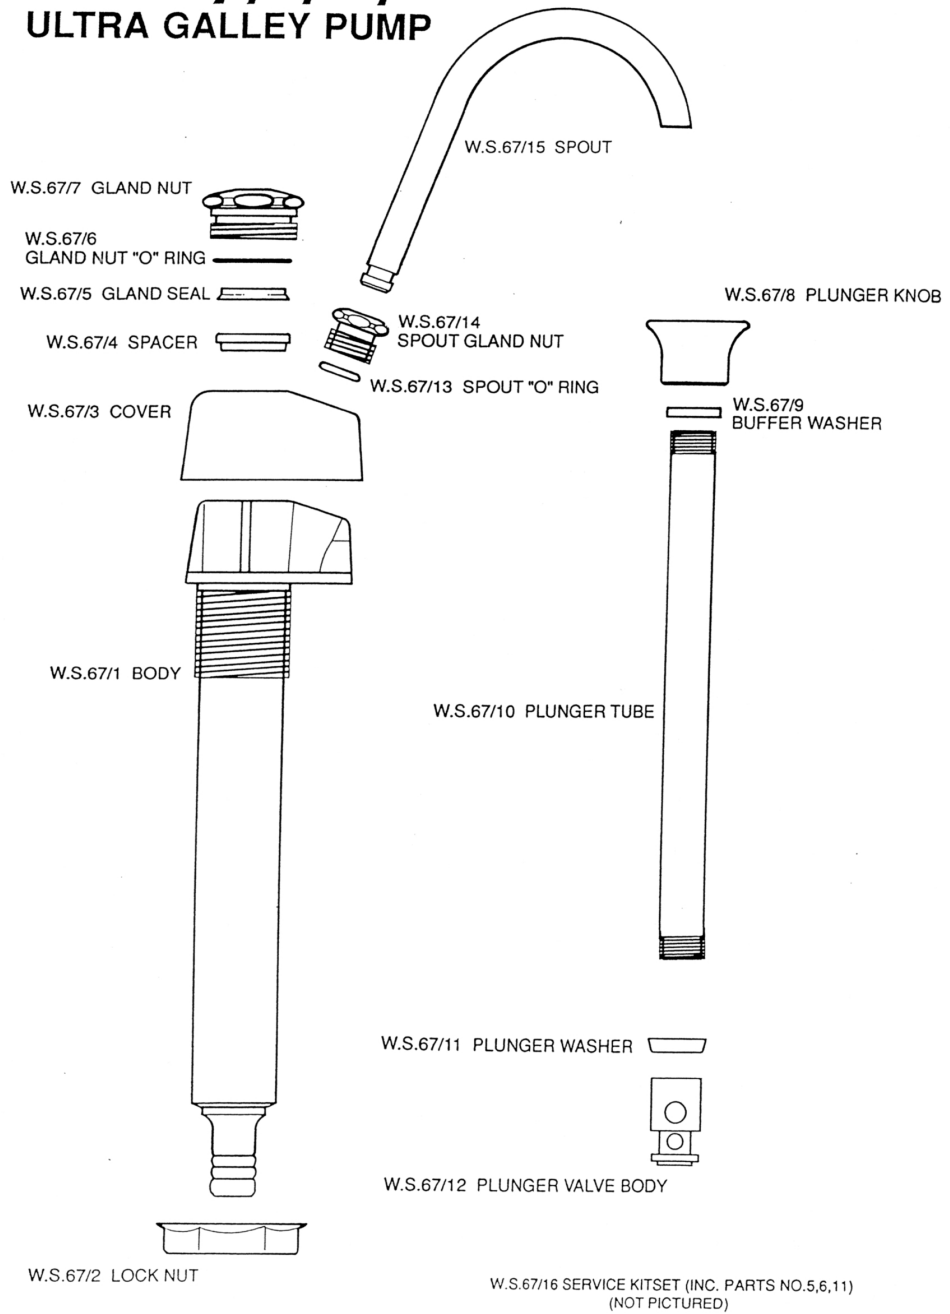

WS 67