BLUE SEA SYSTEMS Marine Electrical Products

SMS Surface Mount System

PN 3113 / PN 3116 / PN 3118 / PN 3119

Meets ABYC E11 when used with an ELCI Main circuit breaker and mounted within 10 feet of the shore power inlet

A WARNING A

The Surface Mount System panel enclosure should be installed by a certified marine electrician.

🗥 DANGER 🗥

Hazardous voltage. Improper handling can cause death or serious injury. Turn off any shore sources and disconnect shore cord(s). Lock out other AC power sources before beginning electrical installation.

- · Models available with ELCI Main circuit breakers for 120V 30A, 120V 50A, and 120/240V 50A
- · Blank apertures for custom breaker loading
- · Glass filled polycarbonate base
- · Clear cover allows easy view of circuit breaker status
- Overlapping cover for strength and increased gasket protection
- · Oversized, formed in place seamless PUR gasket
- · Easily removable stainless steel hinge pin for unobstructed installation
- · Stainless steel latch secures cover without penetrating the enclosure
- Blank circuit positions accommodate Carling Technologies™ A and C Series Flat Rocker and ELCI Main circuit breakers
- · Stainless steel mounting hardware included
- Includes waterproof glands (3116, 3118, 3119)
- LED lights for back lighting and ON indication (3116, 3118, 3119)

GUARANTEE: Blue Sea Systems stands behind its products for as long as you own them. Find detailed information at www.bluesea.com/about. For customer service, call 800-222-7617.

Blue Sea Systems Inc. 425 Seguoia Drive Bellingham, WA 98226 USA

p 360.738.8230 f 360.734.4195 conductor@bluesea.com www.bluesea.com 980009910 Rev.001

Installation

Required Tools

· Hole Saw, drill or step drill suitable for cable glands (see information on back). · Drill motor suitable for above

- Screw Drivers
- Knife
- · Measuring device
- Wire cutters and Crimpers

Required Parts

- · Suitable ring terminals for circuit breaker and grounding connections
- · In some installations it may be desirable to attach a mounting substrate to the hull with adhesive or epoxy instead of screwing directly to the hull.

Installing the Enclosure Panel

- The Surface Mount System Enclosure Panel should be installed by a certified marine electrician.
- · Plan the installation by determining where the enclosure will be mounted o Per ABYC, the enclosure cannot be mounted further than the reach of a 10'
- cable from the AC power inlet o Consider the needed clearances to access the enclosure and open the sealed cover o Allow for a wire drip loop outside the enclosure and sufficient service loop
- for wires inside the enclosure
- Determine which included glands are needed. It is recommended that glands be installed on the bottom of the enclosure to maintain the waterproof integrity of the sealed enclosure.
- · Smaller glands may permit convenient installation of a galvanic isolator if used in the systems. In this case the line safety ground wire would exit the enclosure to the galvanic isolator and the boat side of the galvanic isolator would return to the enclosure to join the internal connections and the ground from the load side power cable.
- Try all cable glands on the wire for correct fit before proceeding.
- · Flat cables can be manipulated to a nearly round shape to fit and seal better in the gland.
- Large round cables with #6 Wire may be a very tight fit in the cable gland. Dismantle the gland and use wire lubricant to ease cable through the rubber seal if necessary.
- · When drilling holes for cable glands, be sure to allow sufficient clearance inside for the nut. The best location is as close to the back of the enclosure as possible and still allow for the nut.

Specifications

Box Specifications

Enclosure Dimensions Exterior Overall Dimensions Temperature Range Cover Screws and Hardware Mounting Hardware

6.0" x 6.0" x 4.0" 152 mm x 152 mm x 102 mm 7.6" x 7.4" x 4.7" 192 mm x 188 mm x 120 mm -40°C to +85°C 10-32, stainless steel 1/4" diameter, #12, (6 mm)


Regulatory

IP66—Protected against powerful water jets Flammability rating—Per UL 508 Toxicity- Non-toxic, halogen free, RoHS compliant UL Listed and NEMA 4X rated, NEMA Type 4, 4X, 6, 6P, 12, and 13


Specifications subject to change. See www.bluesea.com for additional information and specifications

6 LED plugs


Components Included

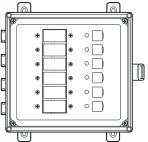


3113 6 Blank circuit positions

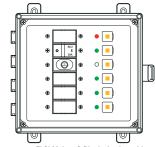

3116 ELCI Main + 3 Blank circuit positions

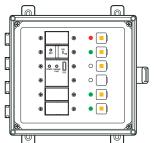

3118 ELCI Main + 2 Blank circuit positions

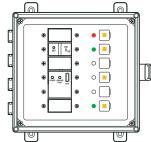

3119 ELCI Main + 1 Blank circuit position

1 ELCI label

3 LED pluas

1 AC Main label

- 1 Reverse Polarity label 30 Basic AC labels, 4206
- Panel Voltage ID label

2 green "ON" indicating 120V AC LEDs, 8034 1 red "Reverse Polarity" indicating 120V AC LED, 8066

Green 120V AC LED

KEY

- -120V/240V AC
- LED Plug


Red 120V AC LED

Backlit circuit label position

30 Basic DC labels, 4205 30 Basic AC labels, 4206 Panel Voltage ID labels 12V DC, 24V DC 120V AC, 230V AC, 120/240V AC

3113 SMS Panel Enclosure Includes:

12 circuit breaker mounting screws



- 1 ELCI Main 120V 30A, 30mA, 3102
- 2 small wire glands, 3124
- 3 medium wire glands, 3125
- 4 green "ON" indicating 120V AC LEDs, 8034 1 red "Reverse Polarity" indicating 120V AC LED, 8066
- 1 LED plug
- - 12 circuit breaker mounting screws 6 Backlit circuit label positions
 - 1 AC Main label
 - 1 Reverse Polarity label
- 1 ELCI label
- 30 Basic AC labels, 4206

Panel Voltage ID label-120V AC

3118 SMS Panel Enclosure Includes:

- 1 ELCI Main 120V 50A, 30mA, 3103
- 2 small wire glands, 3124
- 1 medium wire gland, 3125
- 2 large wire glands, 3126
- 3 green "ON" indicating 120V AC LEDs, 8034
- 1 red "Reverse Polarity" indicating 120V AC LED, 8066
- 2 LED plugs
 - 12 circuit breaker mounting screws
 - 5 Backlit circuit label positions
 - 1 AC Main label
 - 1 Reverse Polarity label
 - 1 ELCI label
 - 30 Basic AC labels, 4206
 - Panel Voltage ID label-120V AC

3119 SMS Panel Enclosure Includes:

1 ELCI Main 120/240V, 50A, 30mA, 3104


12 circuit breaker mounting screws 4 Backlit circuit label positions

- 2 small wire glands, 3124
- 1 medium wire gland, 3125 2 large wire glands, 3126

Gland Specifications

GLAND SPECIFICATIONS


	WIRE SIZE CABLE DIA. RANGE		DIMENSIONS	
Small 3124 (PG7)	#14 to #10 Single Wire	Min. Dia. .114 in 2.9 mm	Max. Dia. .250 in 6.4 mm	A. Clearance Hole .492 in (12.5 mm) B. Max. O. A. Length 1.17 in (29.7 mm) C. Wrenching Flats .59 in (15.0 mm) Reference diagram below
Medium 3125 (PG16)	#14 to #10 Cable	.230 in 5.8 mm	.530 in 13.9 mm	A. Clearance Hole .886 in (22.5 mm) B. Max. O. A. Length 1.66 in (42.2 mm) C. Wrenching Flats 1.05 in (26.7 mm) Reference diagram below
Large 3126 (PG29)	#6 Cable	.590 in 15.0 mm	.990 in 25.4 mm	A. Clearance Hole 1.470 in (37.3 mm) B. Max. 0. A. Length 2.23 in (56.6 mm) C. Wrenching Flats 1.66 in (42.2 mm) Reference diagram below



FOR NONTHREADED MOUNTING

SEALING NUT

Drill Guides

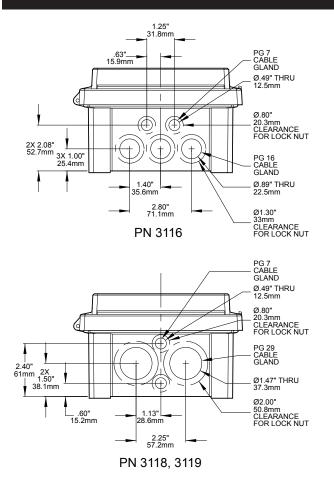

Enclosure Dimensions

